


NORD TANK



NTK 150 XLR

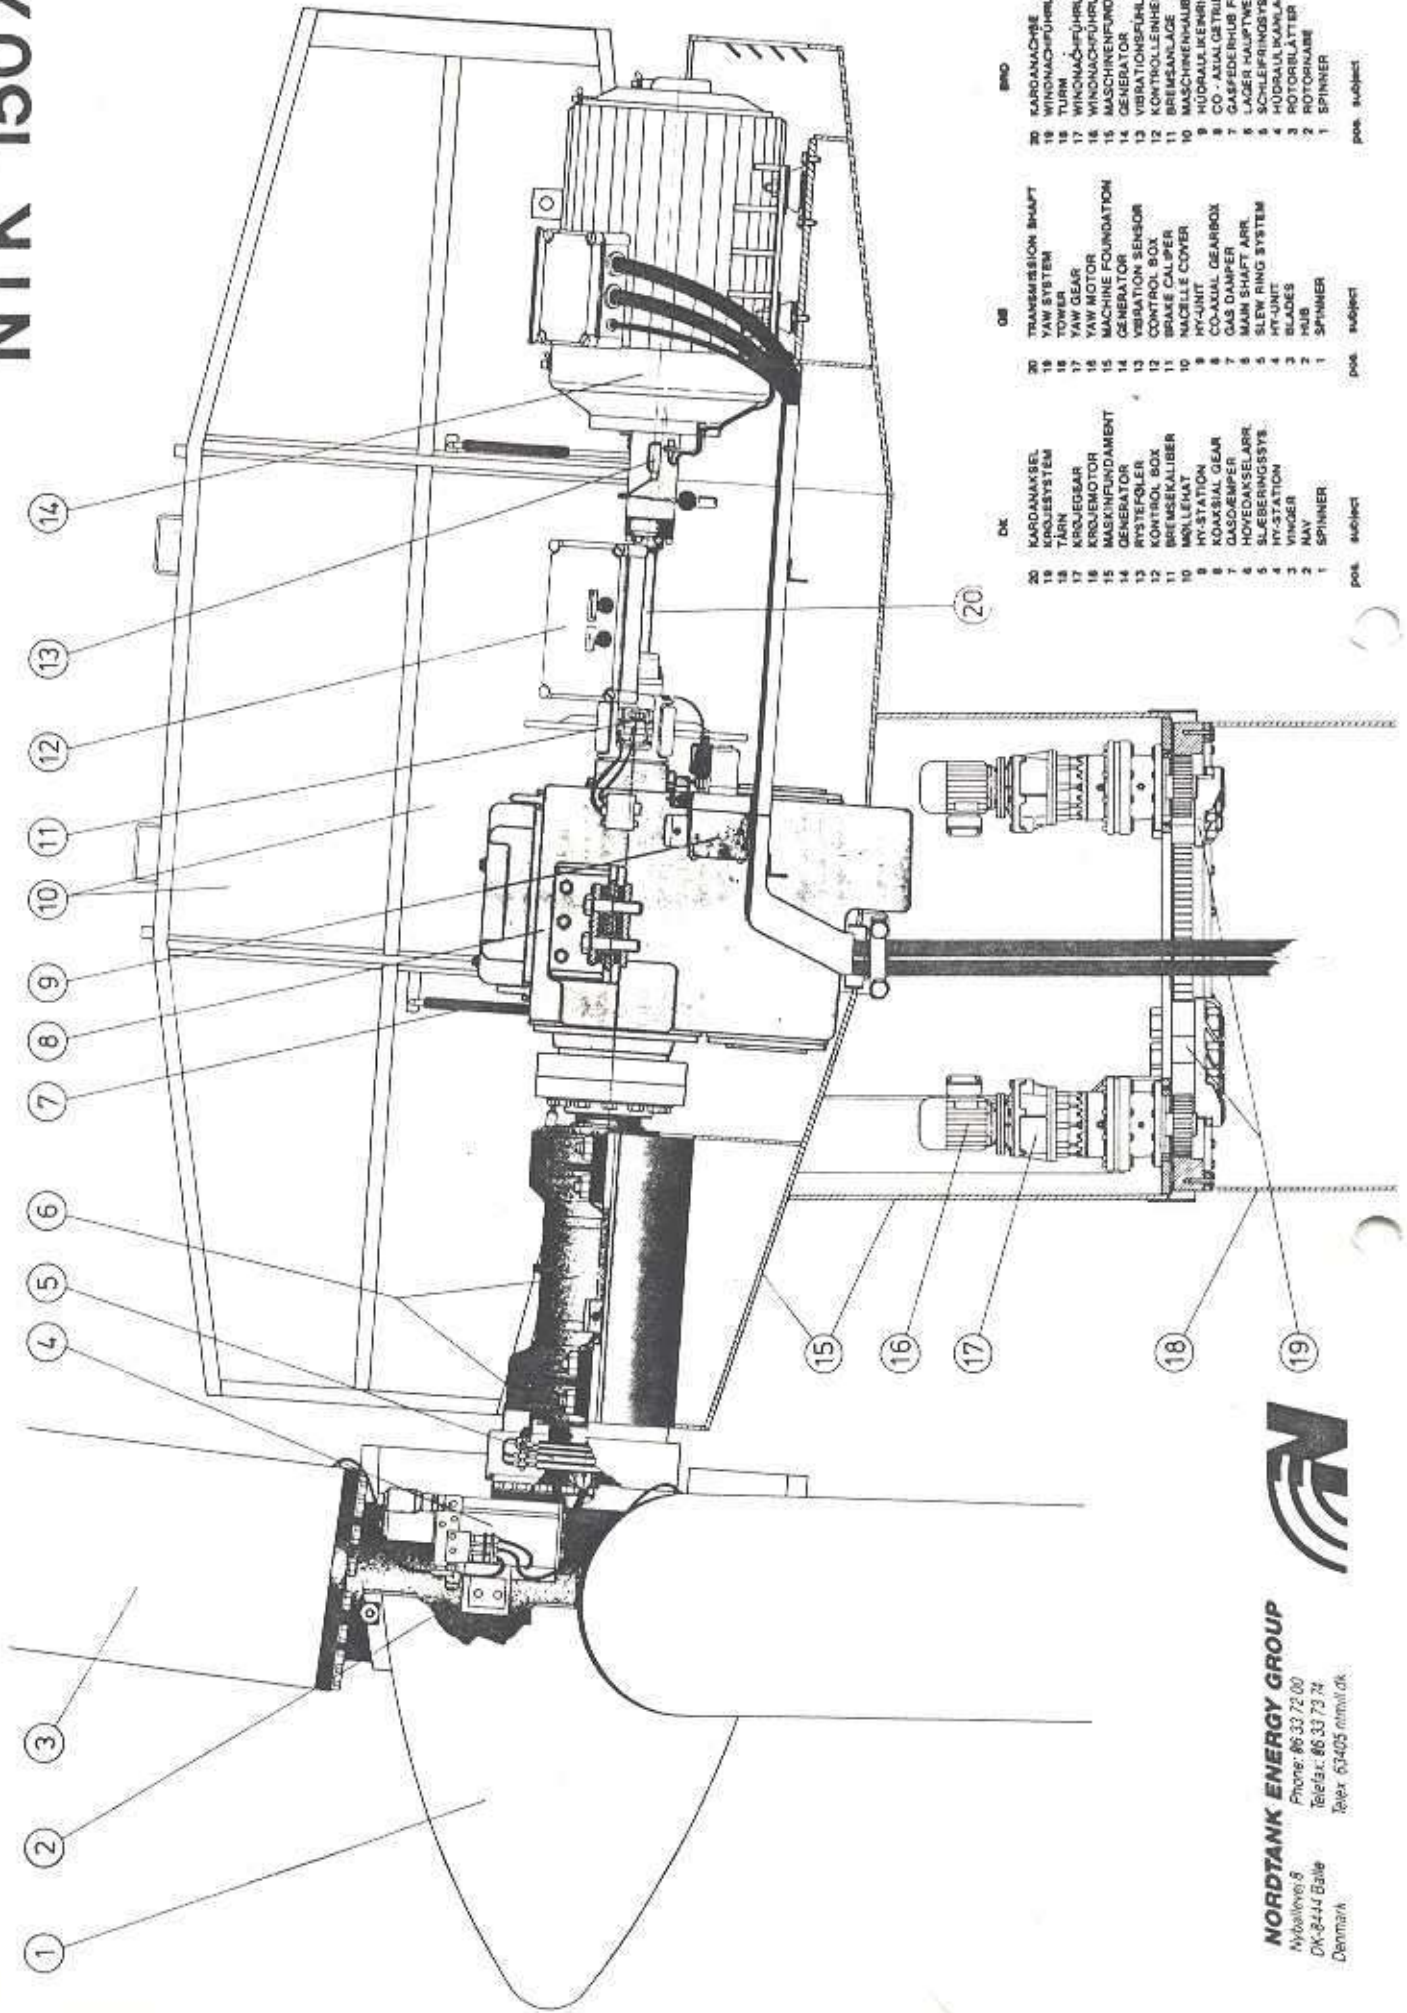

- | | | | | | |
|-----------|--|-----------|---|------------|---|
| DK | KARDANAKSEL
KROJESYSTEM
TÅRN
KROJEGEAR
KROJEMOTOR
MASKINFUNDAMENT
GENERATOR
RYSTEFØLER
KONTROL BOX
BREMSEKALIBER
MØLLEHAT
NY-STATION
KØKSSIAL GEAR
LØSGEMPER
HØJDEKONTROL
RYSTATION
VINGER
NAV
SPINNER | GB | TRANSMISSION SHAFT
YAW SYSTEM
TOWER
YAW GEAR
YAW MOTOR
MACHINE FOUNDATION
GENERATOR
VIBRATION SENSOR
CONTROL BOX
BRAKE CALIPER
NACELLE COVER
HY-UNIT
CO-AXIAL GEARBOX
CO-AXIAL GEAR
SLIP CLAMPER
MAIN SHAFT ASB
SLEW RING SYSTEM
HY-UNIT
BLADES
HUB
SPINNER | BRD | KARDANACHSE
WINDNACHFUHRUNGSSYSTEM
TURM
WINDNACHFUHRUNGSSORTER
WINDNACHFUHRUNGSMOTOR
MASCHINENFUNDAMENT
GENERATOR
VIBRATIONSFÜHLER
KONTROLLENHEIT
BREMSANLAGE
MASCHINENHAUBE
HÜHRAUFLICHTRICHTUNG
CO - AXIALGETRIEBE
GASPEDEHUB FÜR HAUBE
LAGERHAUPTWELLE
SCHWUNGELE
MOTORANLAGE
ROTORBLÄTTER
ROTORHAUBE
SPINNER |
| pos. | subject | pos. | subject | pos. | subject |



NORDTANK ENERGY GROUP
 Nydalvej 8 Phone: 86 33 72 00
 DK-8444 Balle Telefax: 86 33 73 74
 Denmark Telex: 63405 nntml dk